

<b>GENERAL USAGE AND HARDWARE</b>	
BUTTON	8F8858
FERRULE	6B6224
FERRULE	7B2420
FERRULE & SEAL (ASSEMBLED)	6224
FERRULE & SEAL (ASSEMBLED)	2420
GASKET	6B7020
GASKET	9M4852
GASKET	9M4853
GASKET .058"	2N7174
GASKET .064"	5B3265
GASKET .104"	6L1576
GASKET .127"	5H2579
GASKET .131"	1P6442
GASKET .156"	1P6441
GASKET .194"	5M2667
GASKET .223"	2S8959
GASKET .248"	2S8960
GLOW PLUG BLANK	4N4122
GLOW PLUG, 12 VOLT	3T8705
GLOW PLUG, 24 VOLT	3T8706
GLOW PLUG, 24 VOLT	3T9562
OIL SHIELD	6N7174
RETAINER, VALVE SPRING	2N9297
RETAINER, VALVE SPRING	3B1142
RING	9F7707
ROTOCOIL	7N7639
SPACER, VALVE SPRING	3N1414
SPRING, VALVE, INNER	9M5349
SPRING, VALVE, OUTER	9M5350
STUD	6L8562
VALVE LOCK	2A4429
VALVE LOCK	3B1143
WATER DIRECTOR	5H7071
STUD, TAPER LOCK	3D0490
STUD, TAPER LOCK	4S6137
STUD, TAPER LOCK	7L0520
STUD, TAPER LOCK	8M1871
<b>C12</b>	
SPRING, VALVE	2140586
SPRING, VALVE	2244441
VALVE GUIDE INTAKE/EXHAUST	1008150
<b>C15</b>	
<i>(Please refer to 3400 &amp; C15 section below)</i>	
<b>330 / 333</b>	
SPRING, VALVE	9H9164
VALVE GUIDE, INTAKE/EXHAUST	4N3668
VALVE, EXHAUST	9M4163
VALVE, INTAKE	7M7358

<b>342</b>	
ADAPTER, NATURAL GAS	7L0917
INSERT, VALVE SEAT, EXHAUST	8M9810
INSERT, VALVE SEAT, INTAKE	9M8745
STUD, TAPER LOCK	9H1288
VALVE GUIDE, INTAKE/EXHAUST	7N2051
VALVE GUIDE, INTAKE/EXHAUST	1W1816
VALVE, EXHAUST	8H1994
VALVE, EXHAUST	1W1819
VALVE, INTAKE	1W1818
VALVE, INTAKE	8H1993
<b>343 / 346 / 348</b>	
FERRULE	3H5912
FERRULE	9S5746
INSERT, VALVE SEAT, INTAKE	9M3205
ROTOCOIL	4N6761
SEAT, VALVE SPRING	6N0130
SPRING, VALVE	2S4213
SPRING, VALVE	3S3018
VALVE GUIDE, INTAKE/EXHAUST	6N2236
VALVE, EXHAUST	7E7830
VALVE, INTAKE	1N4885
<b>379 / 398 / 399</b>	
ADAPTER, NATURAL GAS	7L0918
CHAMBER ASSEMBLY	7S5787
GASKET	1P8004
GASKET	1P8005
INSERT, VALVE SEAT, EXHAUST	1S5738
INSERT, VALVE SEAT, EXHAUST	8M4014
INSERT, VALVE SEAT, INTAKE	5S1757
RETAINER, VALVE SPRING	3H5867
RETAINER, VALVE SPRING W/SHLD	1W3062
SPRING, VALVE	7S6323
VALVE GUIDE, EXHAUST	2N9299
VALVE GUIDE, EXHAUST	6N8847
VALVE GUIDE, INTAKE	2N9298
VALVE GUIDE, INTAKE	4N3664
VALVE LIFTER	1021561
VALVE, EXHAUST	1W1822
VALVE, EXHAUST	8N3723
VALVE, EXHAUST	2W3211
VALVE, EXHAUST, NAT GAS	5S5323
VALVE, INTAKE	1W8606
VALVE, INTAKE	7M7817
<b>3114 / 3116</b>	
INJECTOR SLEEVE	1193061
INSERT, VALVE SEAT, EXHAUST	1W2713
INSERT, VALVE SEAT, INTAKE	7W8065
INSERT, VALVE SEAT, INTAKE	1696862

continued next page...

<b>3114 / 3116 continued</b>	
RETAINER, VALVE SPRING	1335037
RETAINER, VALVE SPRING	7E7779
SEAL, VALVE STEM	1193036
SPRING, VALVE	7C4273
SPRING, VALVE, EXH BRAKE	6I2307
VALVE GUIDE, INTAKE/EXHAUST	9Y8848
VALVE LOCK	1W2715
VALVE, EXHAUST	1360819
VALVE, INTAKE	1614280
VALVE, INTAKE	7W8064
<b>3126</b>	
RETAINER-SPRING	1344483
SEAL	1478214
SEAL, VALVE STEM	1632478
SEAT-VALVE SPRING	1376715
SPRING, VALVE	1376718
SPRING, VALVE	1406188
VALVE GUIDE	1409670
VALVE GUIDE	1478220
VALVE, EXHAUST	1478211
VALVE, INTAKE	1457390
<b>3176</b>	
SPRING, VALVE, INNER	7W7083
SPRING, VALVE, OUTER	7W7082
<b>3204 / 3208</b>	
CONV GUIDE, VALVE OD.502	6I2864
CONV GUIDE, VALVE OD.502	6I2865
INSERT, VALVE SEAT, EXHAUST	1070265
INSERT, VALVE SEAT, EXHAUST	9N2837
INSERT, VALVE SEAT, INTAKE	2N8943
RETAINER, VALVE SPRING	9N5497
SEAT, VALVE SPRING	1W9897
SPRING, VALVE	1W4259
SPRING, VALVE, INNER	9N5495
SPRING, VALVE, OUTER	9N3617
SPRING, VALVE, OUTER	9N5496
VALVE LIFTER	9N5786
VALVE, EXHAUST	1196772
VALVE, EXHAUST	9L7683
VALVE, INTAKE	9L7682
<b>3304 / 3306</b>	
ADAPTER, NATURAL GAS	7N1743
VALVE LIFTER	7S3161
CAMSHAFT 3304	7C3862
CAMSHAFT 3306	7E9980
CAMSHAFT KIT	4P2942
CAMSHAFT KIT	9Y1723
CHAMBER ASSEMBLY	8S3970

continued next page...

<b>3304 / 3306 continued</b>	
GLOW PLUG, 12 VOLT	3T9561
HEAD BARE ASSEMBLY, CYLINDER 3304PC	8N1188
HEAD BARE ASSEMBLY, CYLINDER 3306DI	8N6796
HEAD BARE ASSEMBLY, CYLINDER 3306PC	8N1187
INSERT, VALVE SEAT, EXHAUST	1W5321
INSERT, VALVE SEAT, EXHAUST	7N1649
INSERT, VALVE SEAT, INTAKE	1070268
INSERT, VALVE SEAT, INTAKE	5S7218
OIL SHIELD	8N7780
ROTOCOIL	1031800
ROTOCOIL W/SHIELD	1W5300
SEAL, VALVE STEM	2M7876
SEAL, VALVE STEM, INTAKE	7W9143
SLEEVE	6N3314
SPACER, VALVE SPRING	7W7488
SPRING, VALVE	7S7144
STUD	2M2488
STUD	3M0496
STUD, TAPER LOCK	7S6719
VALVE	6N9915
VALVE GUIDE, INTAKE/EXHAUST	1621589
VALVE GUIDE, INTAKE/EXHAUST	3N0515
VALVE GUIDE, INTAKE/EXHAUST	4W9176
VALVE GUIDE, INTAKE/EXHAUST	7E1551
VALVE GUIDE, INTAKE/EXHAUST	9Y7895
VALVE, EXHAUST	1487455
VALVE, EXHAUST	2W2877
VALVE, EXHAUST	7W7491
VALVE, EXHAUST	8N0875
VALVE, EXHAUST, NAT GAS	3N0516
VALVE, INTAKE	1007860
VALVE, INTAKE	2W2621
VALVE, INTAKE	5S6452
VALVE, INTAKE	7W7490
VALVE, INTAKE, NAT GAS	3N0514
<b>3406 / 3408 / 3412 &amp; C15</b>	
ADAPTER, NATURAL GAS	7W3860
CAMSHAFT W/O GEAR, 3406	4W2430WOG
CAMSHAFT W/O GEAR, 3406	8N9245WOG
CAMSHAFT W/O GEAR, 3406B	1007408WOG
EXHAUST STUD KIT	ESK3406B
EXHAUST STUD KIT (E engines)	ESK3406E
GASKET	4N7253
INSERT, VALVE SEAT, 010 EXH	4S8903
INSERT, VALVE SEAT, EXHAUST	1W5283
INSERT, VALVE SEAT, INTAKE	4N5893
INSERT, VALVE SEAT, EXHAUST	2120936
INSERT, VALVE SEAT, EXHAUST	4W4325

continued next page...

3406 / 3408 / 3412 & C15 continued	
INSERT, VALVE SEAT, INTAKE	1227352
INSERT, VALVE SEAT, INTAKE	2143286
INSERT, VALVE SEAT, EXHAUST	1986529
REPAIR KIT, LIFTER	1055139RK
ROLLER & PIN SET	4W3817
ROTOCOIL	1862001
ROTOCOIL	4W2474
ROTOCOIL	6N7154
ROTOCOIL W/SHIELD	1376500
ROTOCOIL W/SHIELD	6N7175
SHIELD (E engines)	1376501
SPRING, VALVE	2113122
SPRING, VALVE	4N5906
SPRING, VALVE, INNER	4W2472
SPRING, VALVE, OUTER	1757526
SPRING, VALVE, OUTER	2113123
SPRING, VALVE, OUTER	4W2471
STUD, TAPER LOCK	1061792
STUD, TAPER LOCK (E engines)	1061793
VALVE GUIDE .002"	1737188/002
VALVE GUIDE .005"	1546998
VALVE GUIDE .005"	7C0363
VALVE GUIDE, INTAKE/EXHAUST	1227374
VALVE GUIDE, INTAKE/EXHAUST	1516235
VALVE GUIDE, INTAKE/EXHAUST	1737188
VALVE GUIDE, INTAKE/EXHAUST (E engines)	1227375
VALVE GUIDE, EXHAUST	1511329
VALVE GUIDE, EXHAUST	2137537
VALVE GUIDE, INTAKE	1511330
VALVE GUIDE, INTAKE	2137536
VALVE LIFTER	1017788
VALVE, EXHAUST	1152367
VALVE, EXHAUST	1220321
VALVE, EXHAUST	1537024
VALVE, EXHAUST (E engines)	1642542
VALVE, EXHAUST	1018314
VALVE, EXHAUST	2120933
VALVE, EXHAUST	2W2443
VALVE, INTAKE	1152368
VALVE, INTAKE	1220322
VALVE, INTAKE	1227353
VALVE, INTAKE	1537023
VALVE, INTAKE (E engines)	1642543
VALVE, INTAKE	2120932

3508 / 3512 / 3516	
BRIDGE, VALVE EXHAUST	2657538
BRIDGE, VALVE INTAKE	2657537
BUTTON	1546389
INSERT, VALVE SEAT, EXHAUST	1189491
INSERT, VALVE SEAT, EXHAUST	1302608
INSERT, VALVE SEAT, INTAKE	1225963
INSERT, VALVE SEAT, INTAKE	1302607
INSERT, VALVE SEAT, INTAKE	7E5862
INSERT, VALVE SEAT, NAT GAS	6I1713
OIL SHIELD	2348776
REPAIR KIT, LIFTER	1329439RK
ROTOCOIL	1333814
ROTOCOIL <b>NEW!</b>	1977062
ROTOCOIL <b>NEW!</b>	1977063
SEAL, VALVE STEM	1977006
SPRING, VALVE	1944902
SPRING, VALVE	2816157
SPRING, VALVE, INNER	1011177
SPRING, VALVE, INNER	7N1903
SPRING, VALVE, OUTER	1011180
SPRING, VALVE, OUTER	7N1904
VALVE GUIDE .005 O/S	1665944
VALVE GUIDE .020 O/S	1491982
VALVE GUIDE, EXHAUST	1845494
VALVE GUIDE, EXHAUST	1976995
VALVE GUIDE, EXHAUST	2061541
VALVE GUIDE, EXHAUST	9Y1846
VALVE, INTAKE AND EXHAUST	1047184
VALVE GUIDE, INTAKE	1845495
VALVE GUIDE, INTAKE	1916766
VALVE GUIDE, INTAKE	9Y1847
VALVE GUIDE, INTAKE/EXHAUST	1339306
VALVE LIFTER	1329439
VALVE LIFTER	2636679
VALVE LOCK	1977055
VALVE, EXHAUST	1219839
VALVE, EXHAUST	1944897
VALVE, EXHAUST 45°	1219835
VALVE, INTAKE	2102542
VALVE, INTAKE AND EXHAUST	7E4609

All manufacturers' names, numbers, symbols and descriptions are for reference only. It is not implied that any part is the product of the manufacturer. Caterpillar® and Cat® are registered trademarks of Caterpillar, Inc

## IPD

23231 S. Normandie Ave. Torrance CA USA 90501

Phone: 310-602-5399 Fax: 310-530-2708 Email: [sales@ipdparts.com](mailto:sales@ipdparts.com)

[www.ipdparts.com](http://www.ipdparts.com)

**IPD is an ISO9001:2000 Certified Company**